



Installation Guide for 2007-13 Chevrolet Silverado Headlights

ALPHAREX specializes in designing and producing superior and uniquely stylish aftermarket automotive performance lighting with unrivalled innovative technology. This installation guide takes you through the step-by-step process of installing your new **ALPHAREX HEADLIGHTS** for your 2007-13 Chevrolet Silverado

DO NOT USE DIELECTRIC GREASE!



Table of Contents



PART I REMOVE HEADLIGHTS

- **INSTALLATION TOOLS**
- **STEP 1.** Disconnecting the negative battery terminal
- **STEP 2.** Remove the radiator shroud
- **STEP 3.** Remove the grille
- **STEP 4.** Remove the headlight bolts
- **STEP 5.** Remove the headlights

PART II INSTALL HEADLIGHTS


- **STEP 1.** Install ALPHAREX headlights
- **STEP 2.** Install the DRL harness
- **STEP 3.** Test the headlight functions
- **STEP 4.** Adjust headlight level
- **STEP 5.** Complete installation

Disclaimer: This installation article is a tutorial guide. By reading this article, you agree it is for reference only and AlphaRex USA and its distributors make no guarantee on the finished results. Under no circumstances whatsoever shall AlphaRex USA nor its distributors be liable for any damage, misuse or personal injuries. If you do not fully understand the installation procedure, it is highly recommended that you seek help from professional mechanics to do the installation.


PART I REMOVE HEADLIGHTS

INSTALLATION TOOLS

PREPARE THESE TOOLS FOR INSTALLATION



Metal
Panel
Popper



Flat
Screwdriver



Phillips
Screwdriver



1/4 Ratchet



1/4 Extension

10mm



Socket


STEP 1. DISCONNECTING THE NEGATIVE BATTERY TERMINAL

Whenever working on your vehicle, always start by disconnecting the negative battery terminal.



STEP 2. REMOVE THE RADIATOR SHROUD

Start by extracting (8) plastic push pins that are securing the radiator shroud in place.

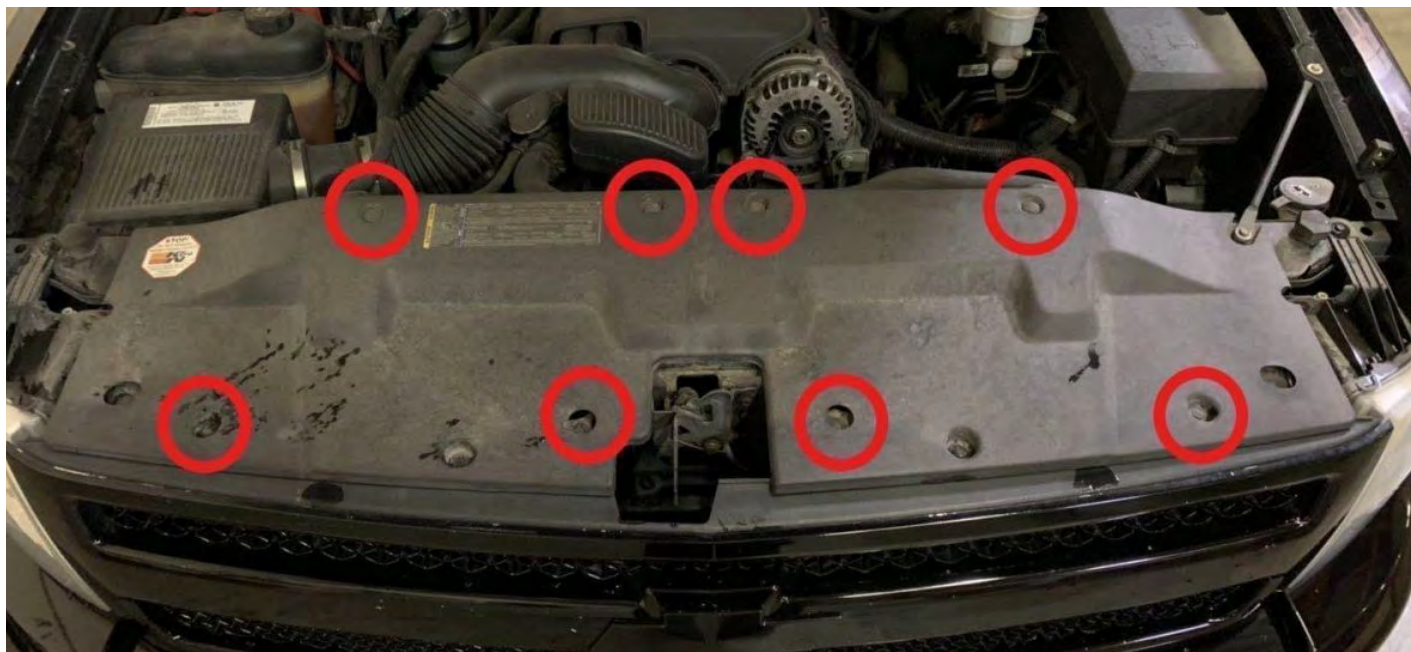


STEP 3. REMOVE THE GRILLE

Take out the four 10mm bolts located on the top of the grille.




Subsequently, utilize pliers to compress the (4) metal clips and pull outward to release the grille.

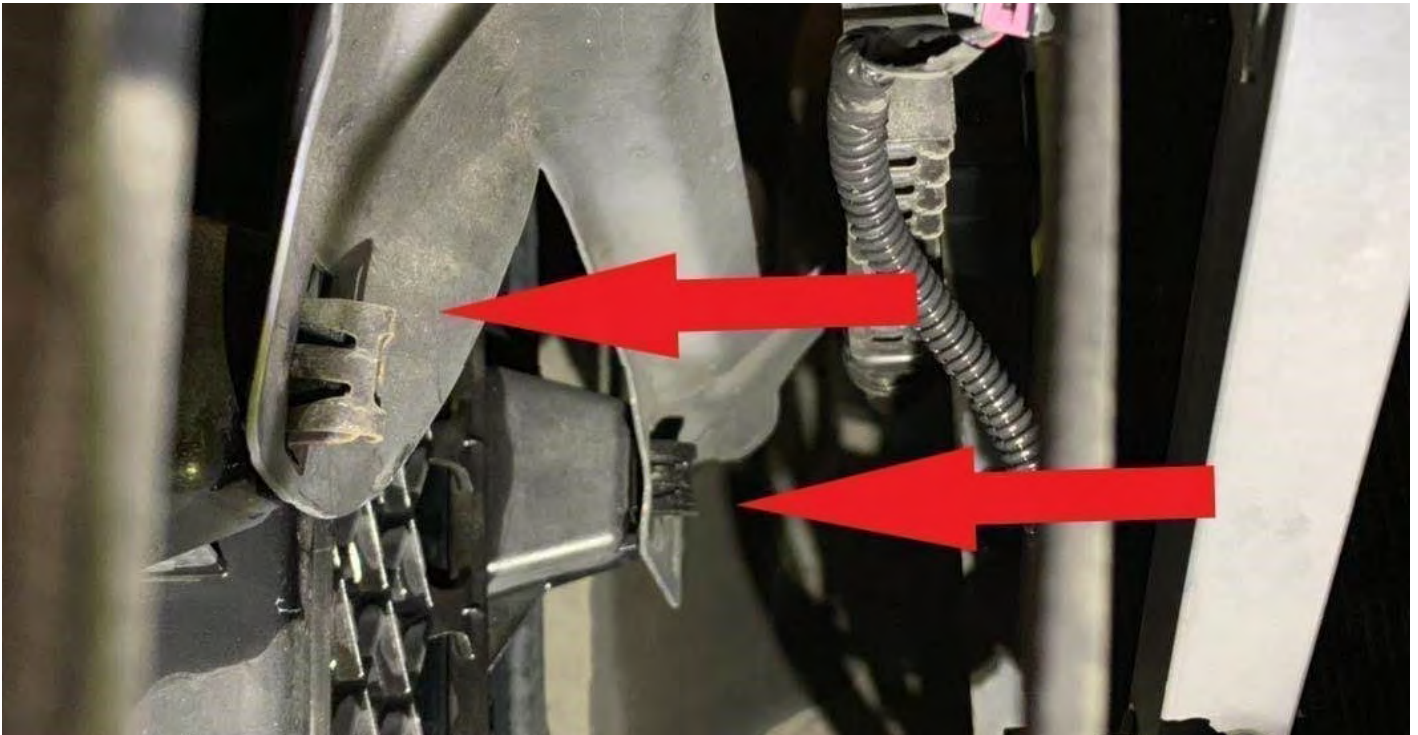

STEP 4. REMOVE THE HEADLIGHT BOLTS

To remove the headlight, you'll need to extract three 10mm bolts – two on the top and use an extension to remove one bolt through the fender liner. Repeat the same steps for the other side.

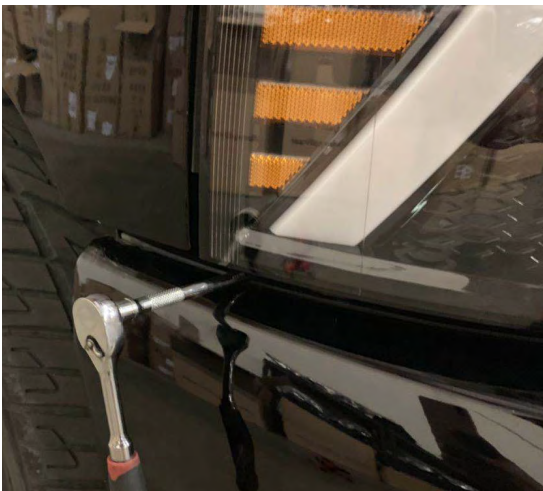

STEP 5. REMOVE THE HEADLIGHTS

Disconnect the headlight sockets and pull the headlight assembly outward from your truck. Repeat the same step for the other side.



PART II INSTALL HEADLIGHTS


STEP 1. INSTALL ALPHAREX HEADLIGHTS



STEP 2. INSTALL THE DRL HARNESS

To install the DRL harness, connect the red wire from the DRL harness, with the short end going to the driver's side and the long end to the passenger side. For more detailed information about wiring the DRL harness, refer to the provided instructions.

[please read our article about How to wire the DRL harness?](#)

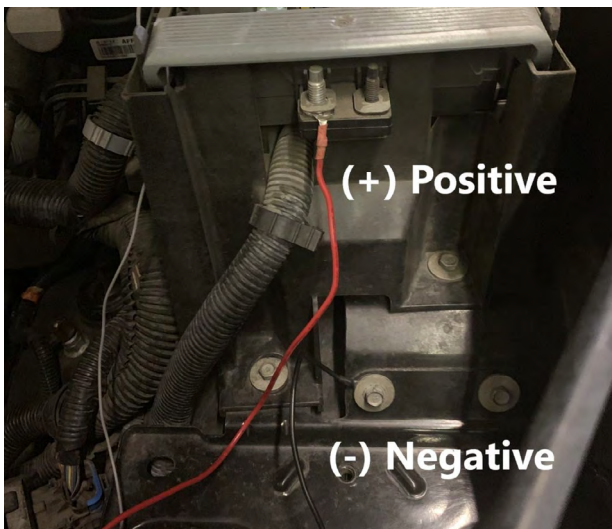

To enable the DRL (Daytime Running Lights) functionality during the day, it is necessary to tap the grey wire into fuse #48.



STEP 3. TEST THE HEADLIGHT FUNCTIONS

Test the functions of your ALPHAREX headlights to ensure everything works properly.




STEP 4. ADJUST HEADLIGHT LEVEL

Once everything has been tested, aim your ALPHAREX headlights by parking 25ft from a wall and level the headlight evenly.

Turn clockwise: to lower the light

Turn counterclockwise: to raise the light

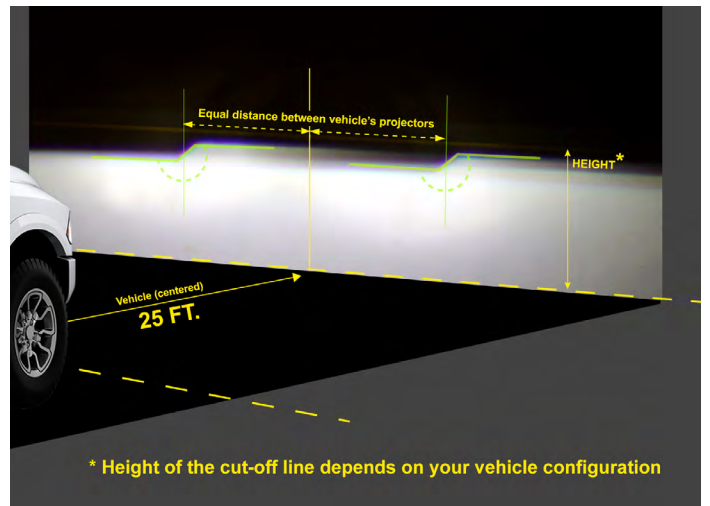

STEP 5. COMPLETE INSTALLATION

Congratulations! You have completed the installation for ALPHAREX **07-13 Chevrolet Silverado HEADLIGHTS.**

