



## *Installation Guide*

*19-23 Silverado Dual Tap  
Fog Lights*



**Installation Guide for 19-23 Silverado 1500 / 2500HD / 3500HD Dual Tap Fog Lights** This installation guide provides a detailed, step-by-step process for installing your new Alpharex Fog Lights on a 19-23 Silverado.

**DO NOT USE DIELECTRIC GREASE / REMOVE ANY DEBRIS OR ANY PRE-EXISTING GREASE OR WEATHER SEALANT**

## Contents

---

Step 1: Remove the OEM Fog light	P1
Step 2: Install Alpharex Fog lights	P2

### **Tools needed:**

- 8mm socket / ratchet
- T10 torx
- Clip removal tool

**Install difficulty: 2 / 5**



## Step 1 - Remove the OEM Fog light

1.1 - To remove the OEM fog light, you will need to access it from underneath the vehicle. Once under the bumper, you will see the back of the fog light, which is secured by three 8mm bolts and connected to a single plug.



1.2 - Once all the bolts are removed and the plug is disconnected, the fog light can be easily removed.





## Step 2: Install Alpharex fog lights

2.1 - Now it's time to Install the new fog lights.




2.2 - When installing the Alpharex fog light, you'll notice it has two plugs instead of one. This is because our fog lights require a separate harness to power the DRLs and sequential turn signals.

2.3 - You will begin by installing the lights back in the same way.




## Step 2: Install Alpharex fog lights

**2.4 - Be sure to reinstall the three bolts and securely connect the single plug to the back of the light.**

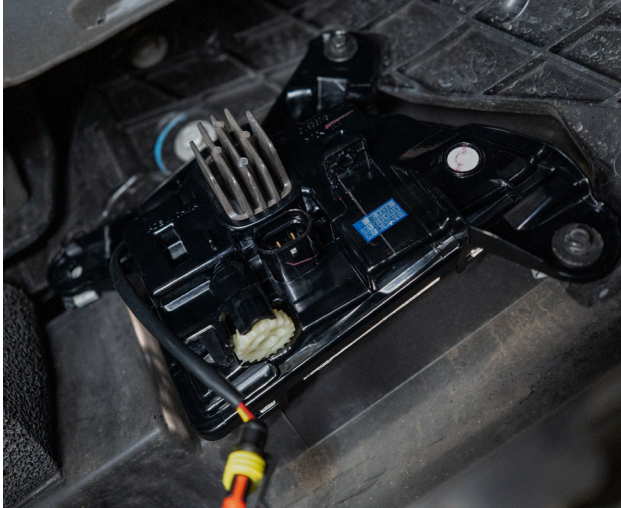

**2.5 - With the light installation complete, we can now proceed with installing the harness.**

**2.6 - Begin by removing the shroud at the front of the engine bay to create more space for the harness installation. It is secured with several clips and a single T10 screw that needs to be removed.**

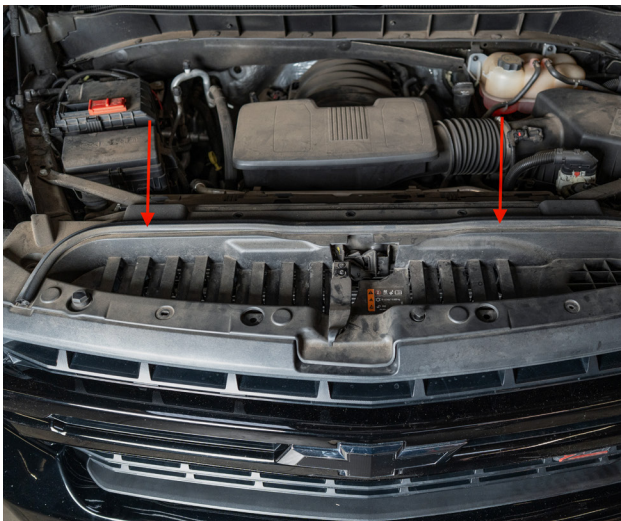


**2.7 - Now that you can remove the cover you should have more room to maneuver the harness.**




## Step 2: Install Alpharex fog lights

The harness has a total of six connections:

- Two two-prong plugs that connect to each fog light.
- Two yellow wires with clip-on connectors that attach to the turn signal wires on the headlight.
- One red wire that connects to the parking light.
- One black wire that serves as the ground connection.

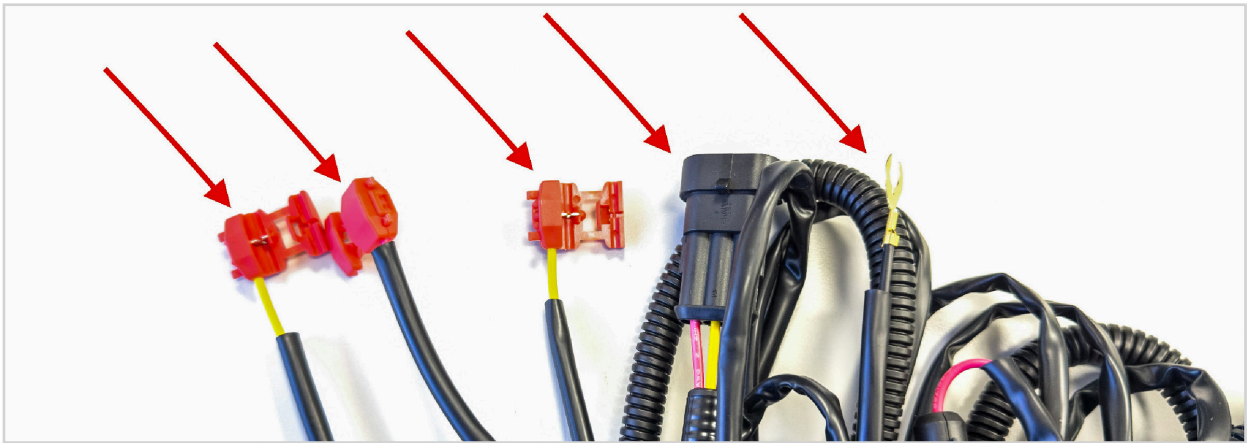

**2.8 - Begin by connecting the two-prong female plugs from the harness to the male plugs on the fog lights, ensuring a secure connection. (This can be done with the light mounted).**

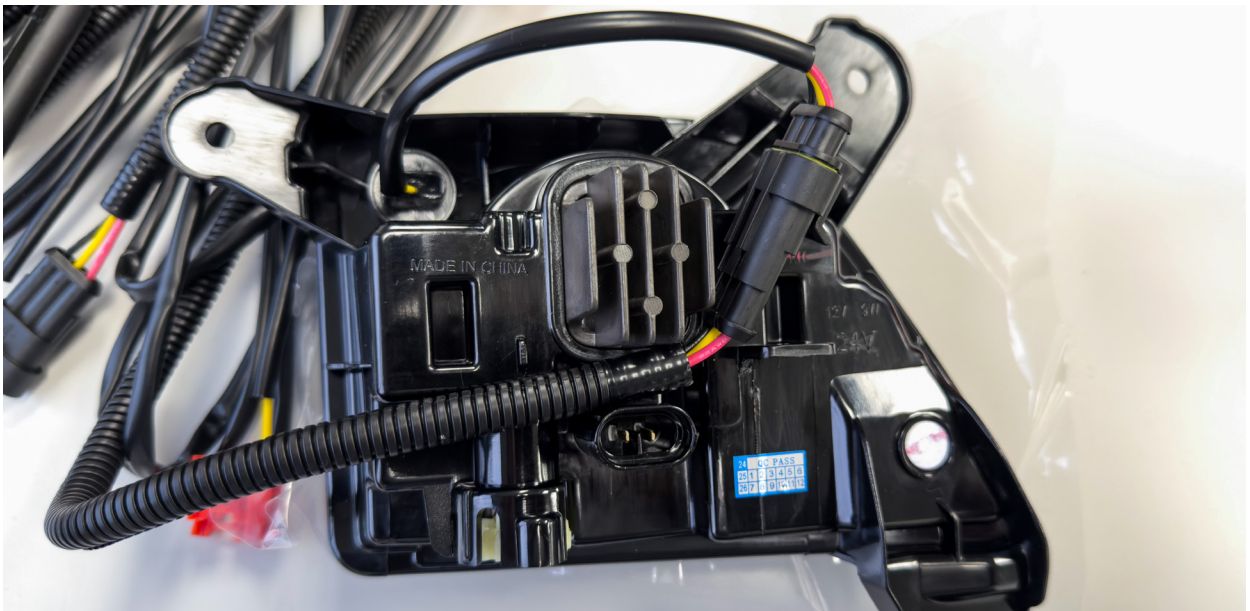

## Step 2: Install Alpharex fog lights

**2.9 - Now, carefully maneuver the harness up behind the headlights and begin the process of connecting the wire taps to the turn signal / Parking light wires on the main headlight plug. Ensure the connections are secure for proper functionality.**



**2.10 - Clip the yellow wires to the turn signal wires on both headlights (6th pin) and the red wire to the parking light (8th pin) on the driver's side.**





## Step 2: Install Alpharex fog lights

2.11 - After repeating these steps on both sides, your installation is complete! Make sure to reinstall all components as they were, and you're all set!

