



How to:

***Switch to Amber DRL on 20-22 Ford Super Duty
LUXX or NOVA series Headlights***



This installation guide provides a detailed, step-by-step process for switching your DRL from White to Amber DRL.

DO NOT USE DIELECTRIC GREASE / REMOVE ANY DEBRIS OR ANY PRE-EXISTING GREASE OR WEATHER SEALANT

Contents

Tools needed:

Philips head screwdriver

How-To: Switch to Amber DRL on 20-22 Ford Super Duty LUXX or NOVA series Headlights


Locate the Control Board

1.1 - Flip the headlight so the bottom is facing up and locate the control board near the base of the housing.



Remove the Control Board


1.2 - Using a Phillips head screwdriver, remove the four screws securing the control board in place.

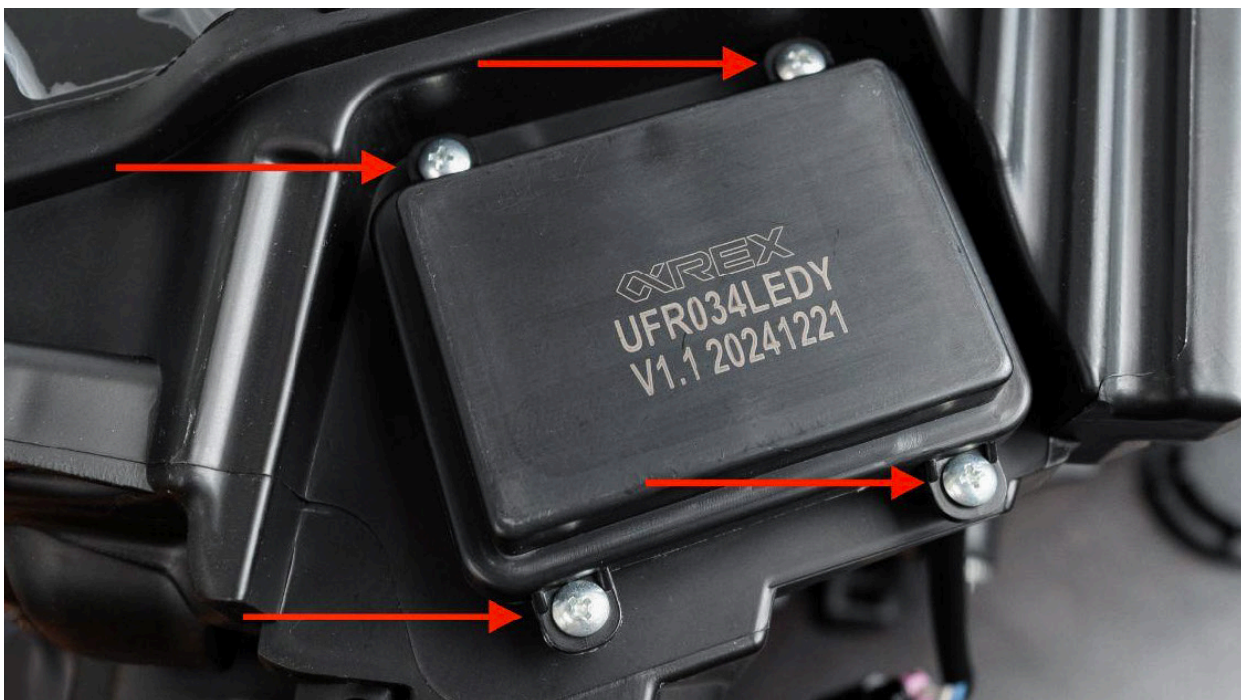

How-To: Switch to Amber DRL on 20-22 Ford Super Duty LUXX or NOVA series Headlights


Access the Internal Connections

1.3 - Carefully pull the control board out to expose the internal wiring. Look for two single-wire plugs—these will be used to change the DRL color.

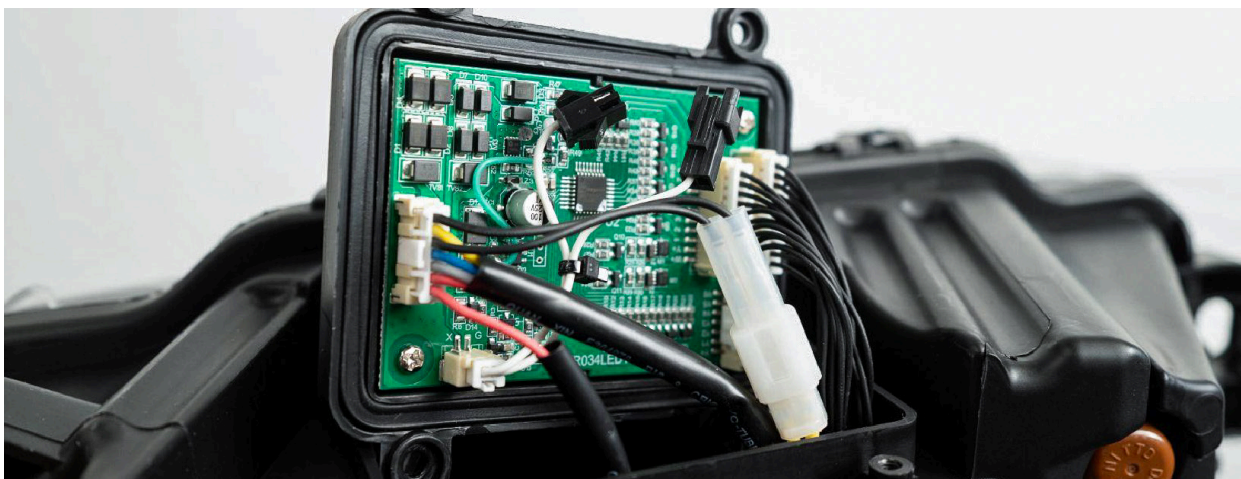

Connect the Plugs

1.4 - Plug the two connectors into each other. This action activates the amber DRL mode.

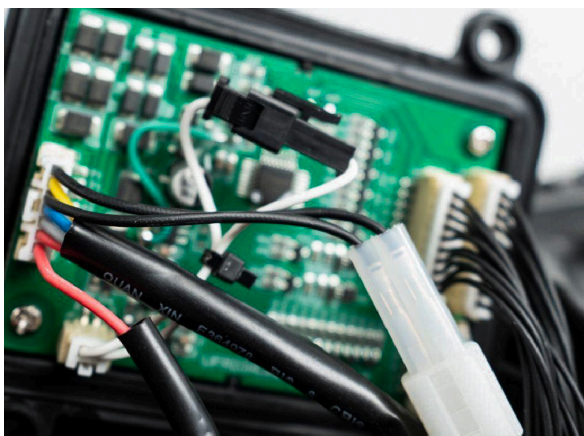

Reinstall the Control Board

1.5 - Once the plugs are connected, reposition the control board and securely fasten it back in place using the original screws.



You're Done

1.6 - The amber DRL is now activated, and your headlight is ready for installation.