

Installation Guide for 20-22 Model Y PRO-Series LED Tail lights

ALPHAREX specializes in designing and producing superior and uniquely stylish aftermarket automotive performance lighting with unrival innovative technology. The following installation guide we take you through the installation of your new **ALPHAREX TAIL LIGHTS** for your 20-22 Model Y step by step.



Table of Contents



PART I REMOVE TAIL LIGHTS

- INSTALLATION TOOLS
- STEP 1. Unscrew the tail lights nuts
- STEP 2. Unplug & remove outer section of the tail lights
- STEP 3. Remove the trunk panel
- STEP 4. Remove inner section of the tail lights

PART II INSTALL ALPHAREX TAIL LIGHTS

- STEP 1. Install inner section of the tail lights
- STEP 2. Install outer section of the tail Igihts
- STEP 3. Complete Installation

Disclaimer: This installation article is a tutorial guide. By reading this article, you agree it is for reference only and AlphaRex USA and its distributors make no guarantee on the finished results. Under no circumstances whatsoever shall AlphaRex USA nor its distributors be liable for any damage, misuse or personal injuries. If you do not fully understand the installation procedure, it is highly recommended that you seek help from professional mechanics to do the installation.

PART I REMOVE TAIL LIGHTS



Whenever working on your vehicle always make sure your vehicle is OFF and parked.



BACK TO

STEP 1. UNSCREW THE TAIL LIGHTS NUTS

Open the liftgate and start by removing tail light's cover from the driver's side.



Pull up the plastic cover.



Open the side of the rear trim and remove 2 X 8mm nuts from back of the tail light.



STEP 2. UNPLUG & REMOVE OUTER SECTION OF THE TAIL LIGHTS

Open the charger port from the driver side. Use a panel popper, gently lift the edges of the tail light and pulling it outward.










BACK TO

Unplug the tail light socket and remove the outer section of the tail light completely.

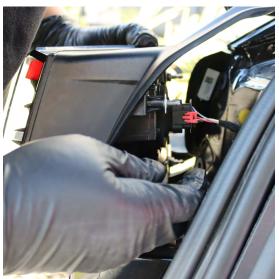




Please repeat the removal process for the other side.






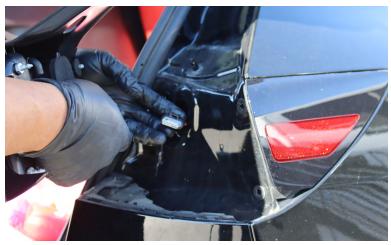

STEP 3. REMOVE THE TRUNK PANEL

With the help of panel popper, gently pull and remove the trunk panel which is hold by multiple plastic clips.

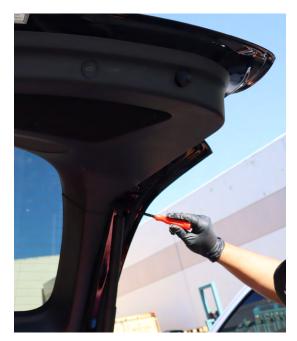




Pull outward and remove the trunk latch cover. Please set it aside for later reinstallation.






Unplug the wire while removing the trunk panel.



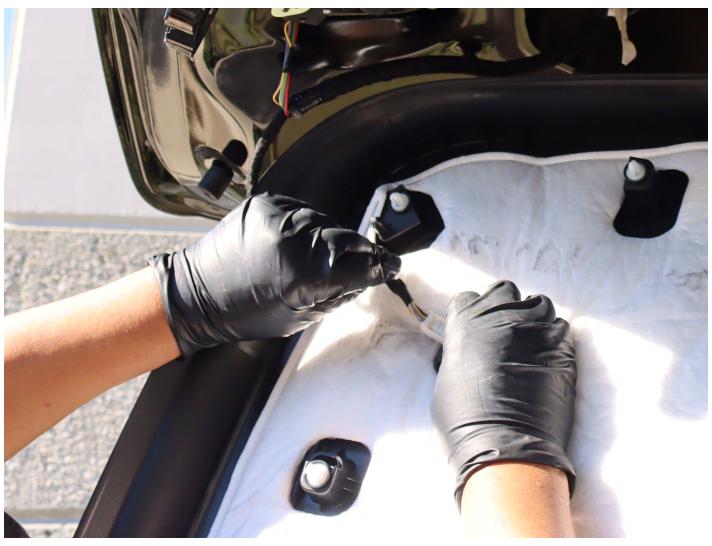



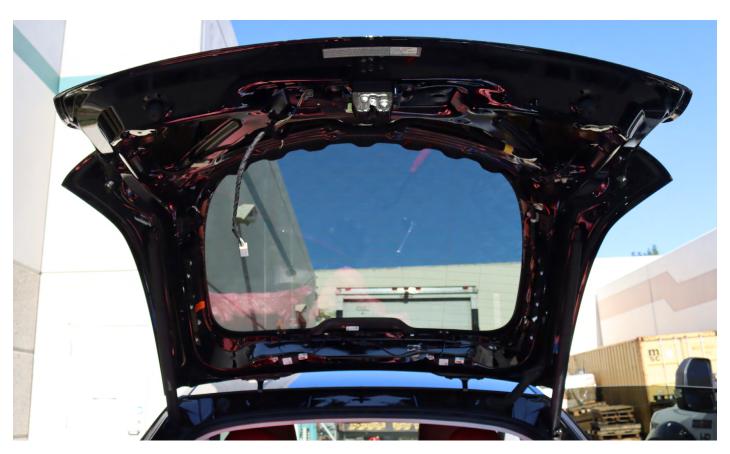

Remove the trunk panel and set it aside for later reinstallation.




STEP 4. REMOVE INNER SECTION OF THE TAIL LIGHTS

Unplug the inner section of the tail lights' wire for each side.



Remove the 8mm bolt from the back of each tail lights.

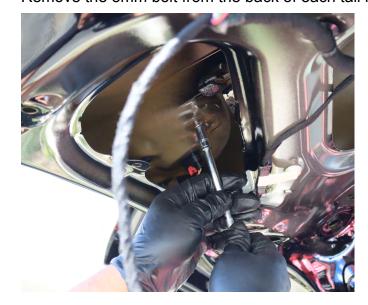





With the help of panel popper, gently pull and remove the inner section of the tail lights.



PART II INSTALL ALPHAREX TAIL LIGHTS






STEP 1. INSTALL INNER SECTION OF THE TAIL LIGHTS

Position ALPHAREX Tail lights to the trunk and to the mounting hole.




BACK T

Reverse the removal process to install the new tail lights. Screw the 8mm bolts and plug-in the tail light wires.

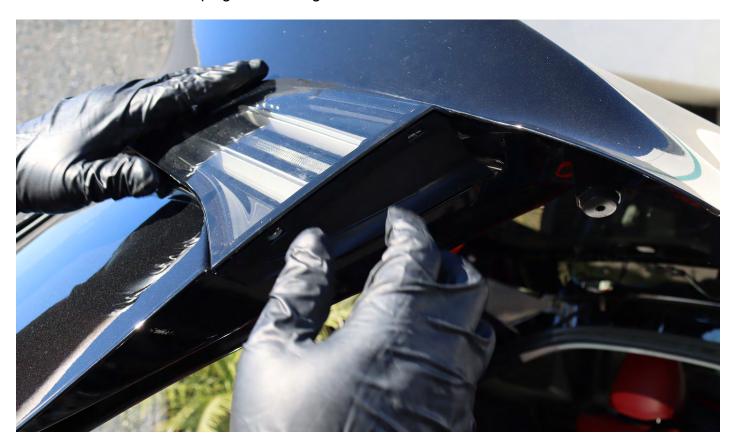






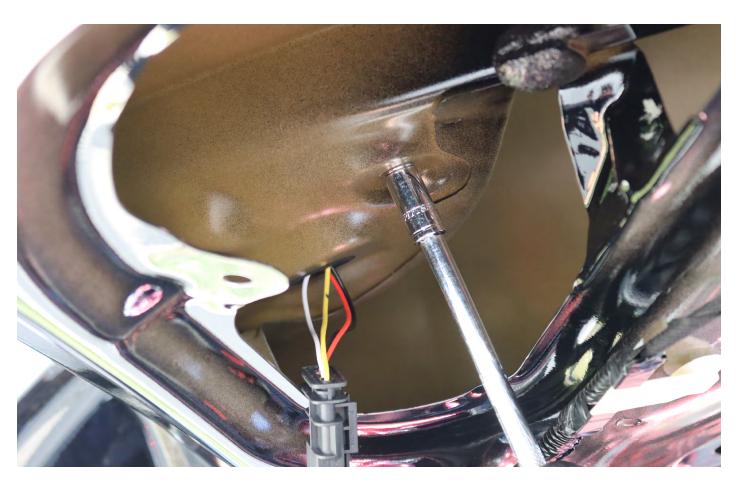



Reinstall the trunk panel and complete the inner tail lights installation.

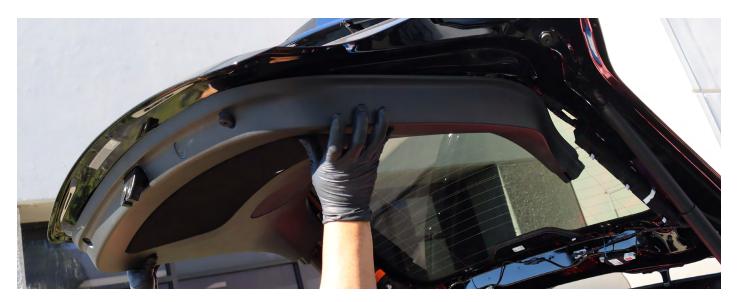






STEP 2. INSTALL OUTER SECTION OF THE TAIL LIGHTS

Plug the tail light wires and position it to the vehicle body. Reverse the removal process to complete the installation. *Repeat the same steps for the other side.*







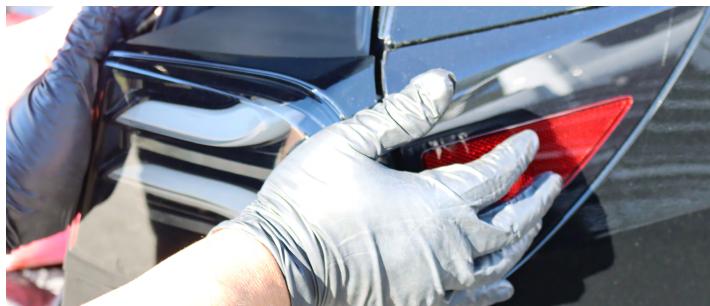







STEP 3. COMPLETE INSTALLATION

Congratulations! you have completed the installation for ALPHAREX 20-22 Model Y PRO-Series LED tail lights.



