




How to:

***Replace the Control Board on 2024+ Tacoma /
2025+ 4Runner Headlights to Activate the
Bottom DRL***

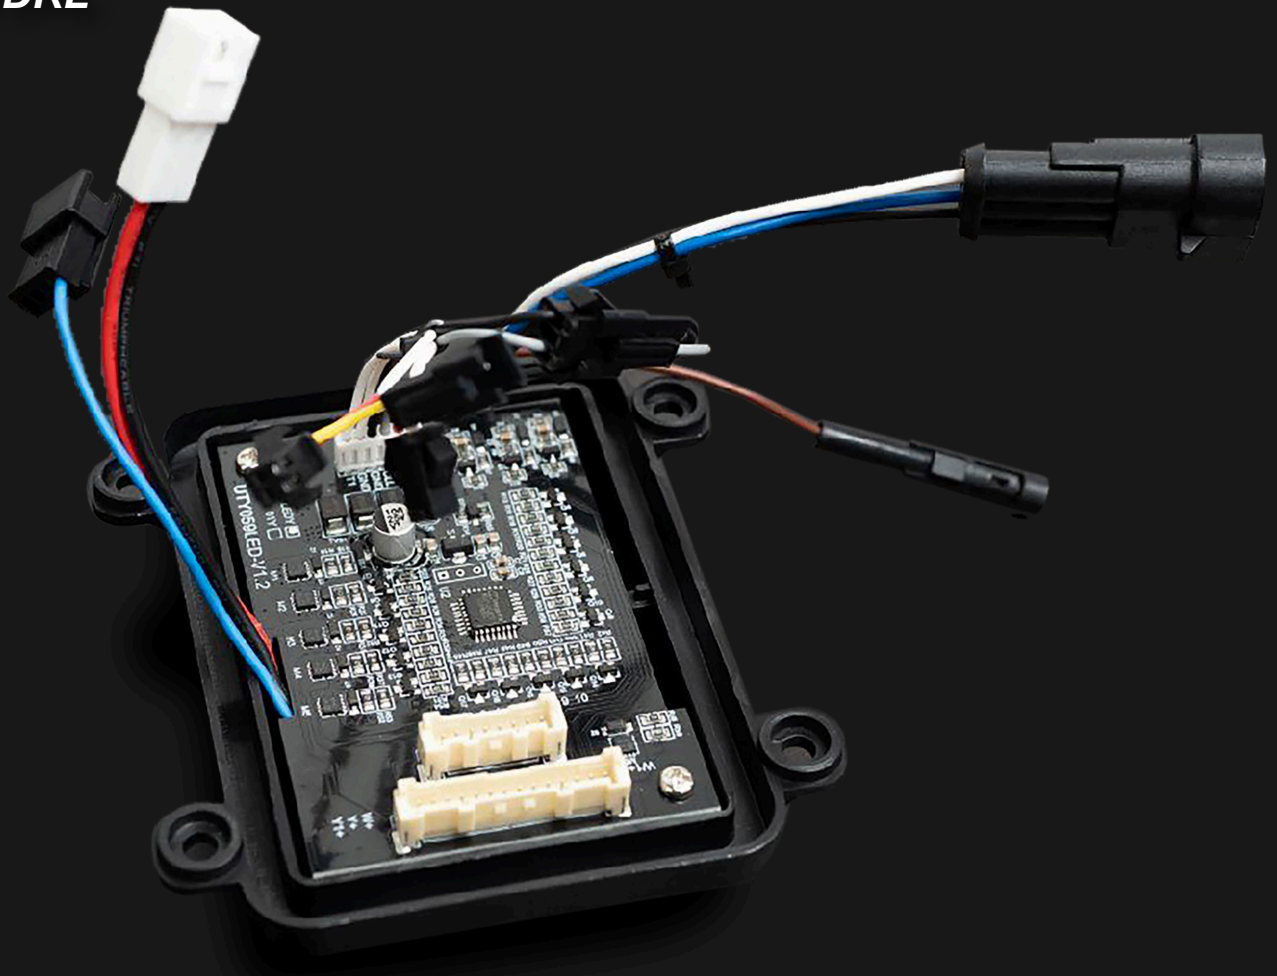

This guide will walk you through the steps needed to replace the control board in your AlphaRex headlights for the 2024+ Tacoma or 2025+ 4Runner, allowing you to enable the bottom daytime running light (DRL) feature.

DO NOT USE DIELECTRIC GREASE / REMOVE ANY DEBRIS OR ANY PRE-EXISTING GREASE OR WEATHER SEALANT

Contents

Tools needed:

Philips head screwdriver

How-To: Replace the Control Board on 2024+ Tacoma / 2025+ 4Runner Headlights to Activate the Bottom DRL

1.1 - Begin by positioning the headlight so that the control board is facing upward and easily accessible.




1.2 - Using a Phillips head screwdriver, carefully remove the four screws holding the control board in place.



How-To: Replace the Control Board on 2024+ Tacoma / 2025+ 4Runner Headlights to Activate the Bottom DRL

1.3 - Carefully lift the control board to reveal the wiring connections underneath.

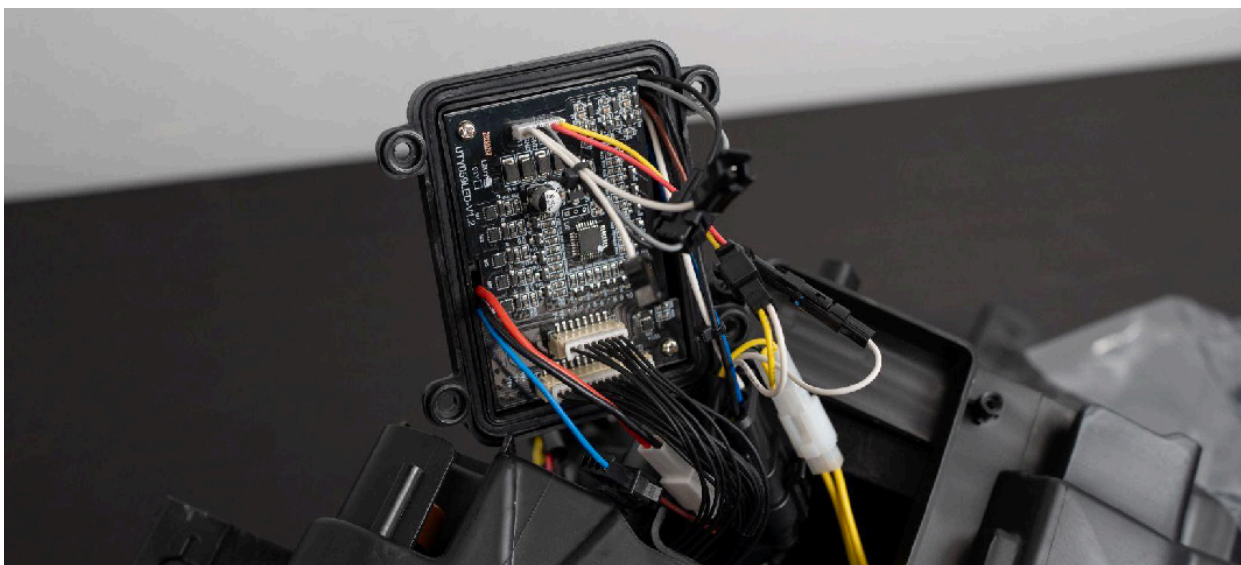


1.4 - Now disconnect the six plugs attached to the control board. (Take note of their positions for reassembly).

1.5 - Note: When removing the following plug, please do so carefully to avoid breaking the locking clip.




How-To: Replace the Control Board on 2024+ Tacoma / 2025+ 4Runner Headlights to Activate the Bottom DRL

1.6 - The remaining components should come off easily without any resistance.

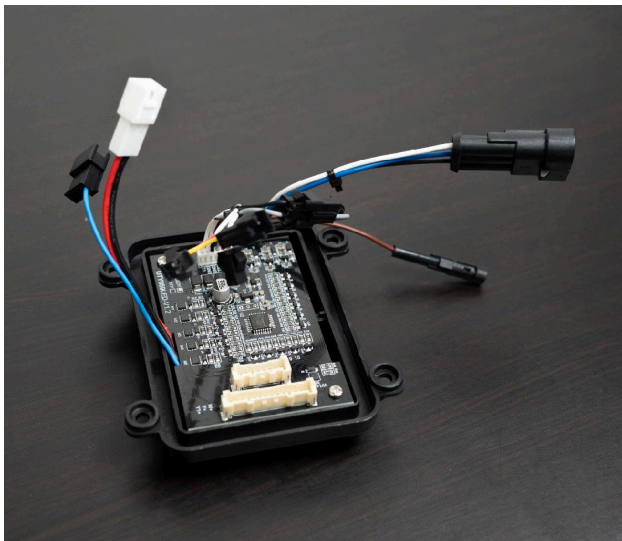

1.7 -Take your replacement control board and reconnect the six plugs into their corresponding ports.


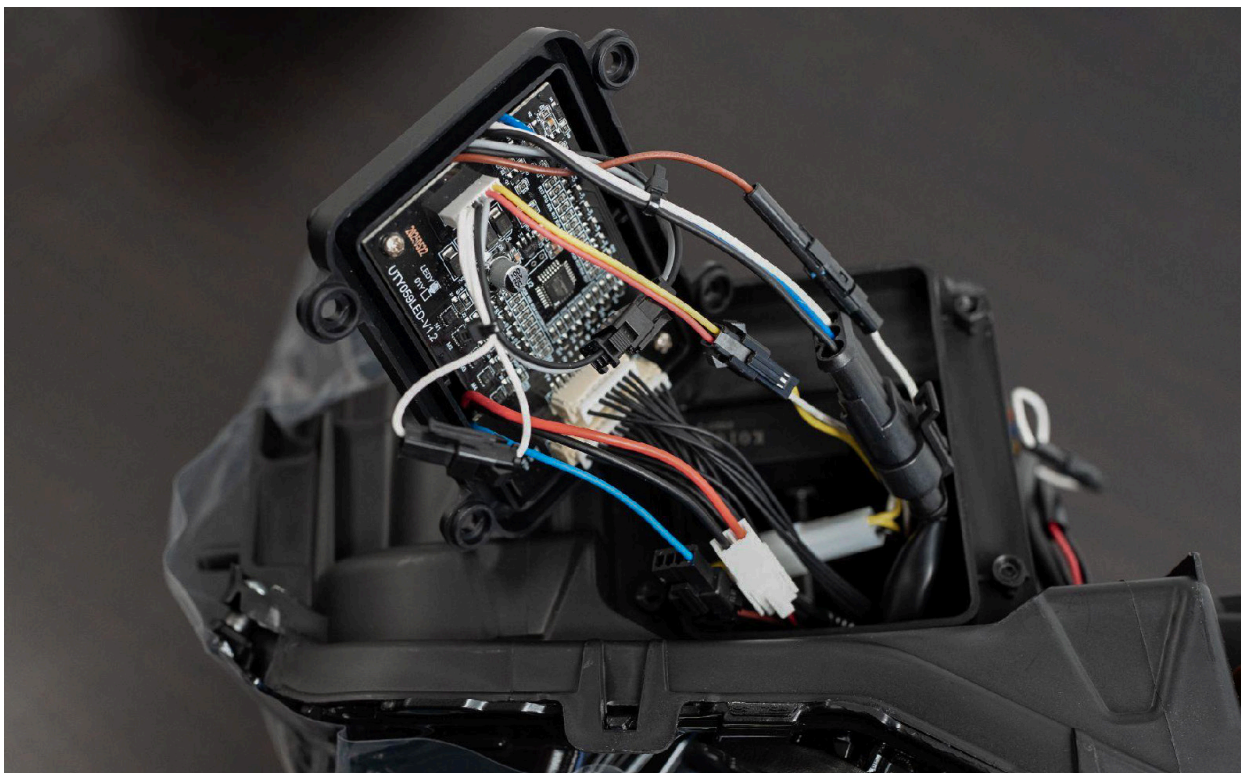


How-To: Replace the Control Board on 2024+ Tacoma / 2025+ 4Runner Headlights to Activate the Bottom DRL

NOTE: At this time decide what color DRL you prefer.

1.8 -If you prefer the amber DRL setting, connect the two single-wire black plugs together at this time.

1.9 -If you want the white DRL, simply leave them disconnected.

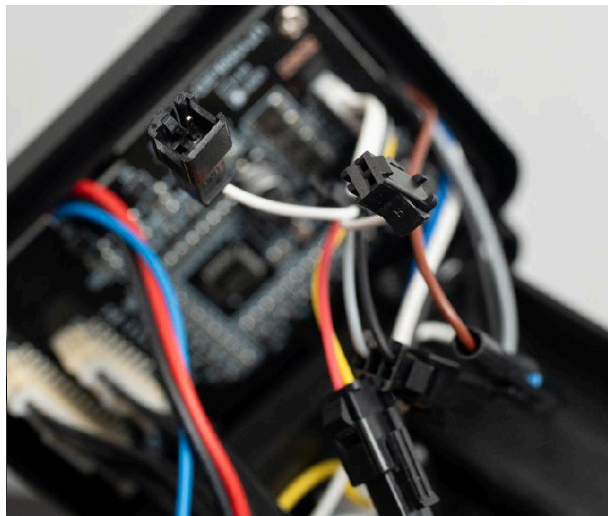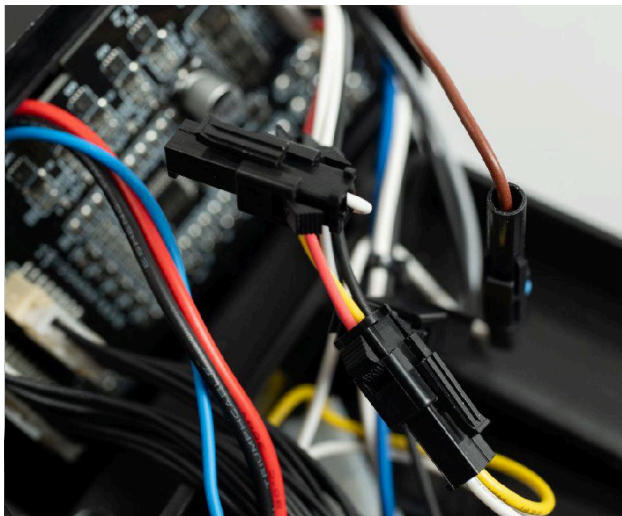

1.10 -Once you've made your selection, go ahead and resecure the control board in place. With that, the installation is complete and your bottom DRL is now activated!

